


TRUE NORTH

FURNITURE CO

ASSEMBLY FOR MISSION AND LANDSCAPE MIRROR

MIRROR SUPPORT BRACKETS MUST
BE ASSEMBLED 1 INCH FROM THE
EDGE OF THE MIRROR FRAME

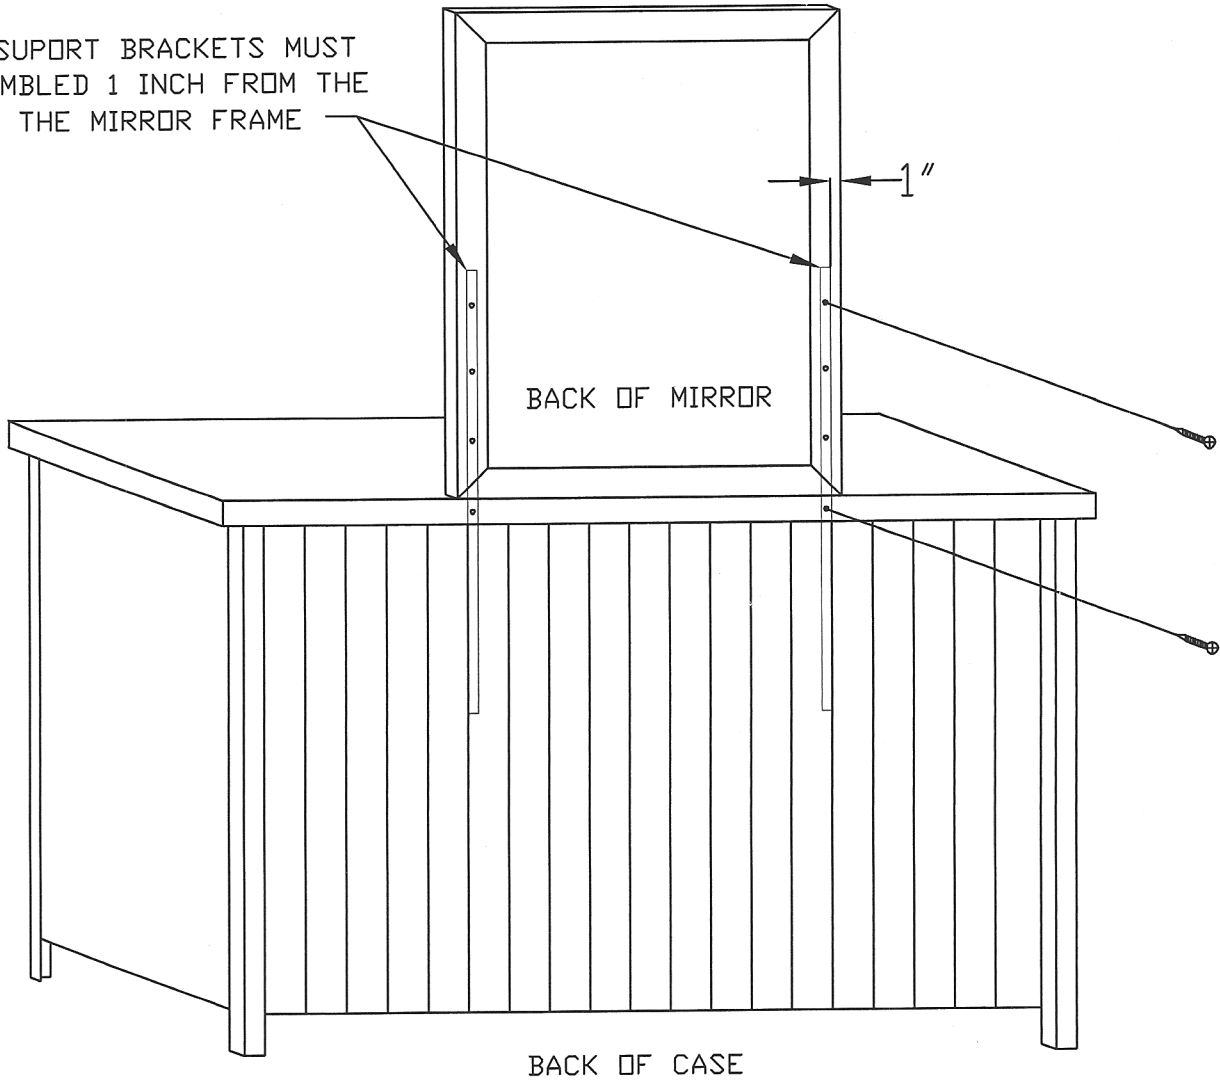

HARDWARE:

2 MIRROR SUPPORTS
6 - 1 1/4 SCREWS

TOOLS:

PHILIPS SCREW DRIVER